 


Protector rings instruction manual

Unlocking the WP protector rings.


a. Unlock the WP protection rings by turning them counterclockwise from the holder.




b. Slide the WP protection rings carrefully onto the diffuse part of the LED lamp



c. Slowly pull the separate parts of the protection holder apart from each other

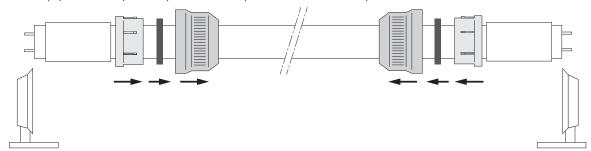

 d. Pull the separate parts over the base face from the LED lamp to release them



e. For the new LED lamp please make the same steps the other way around

